 
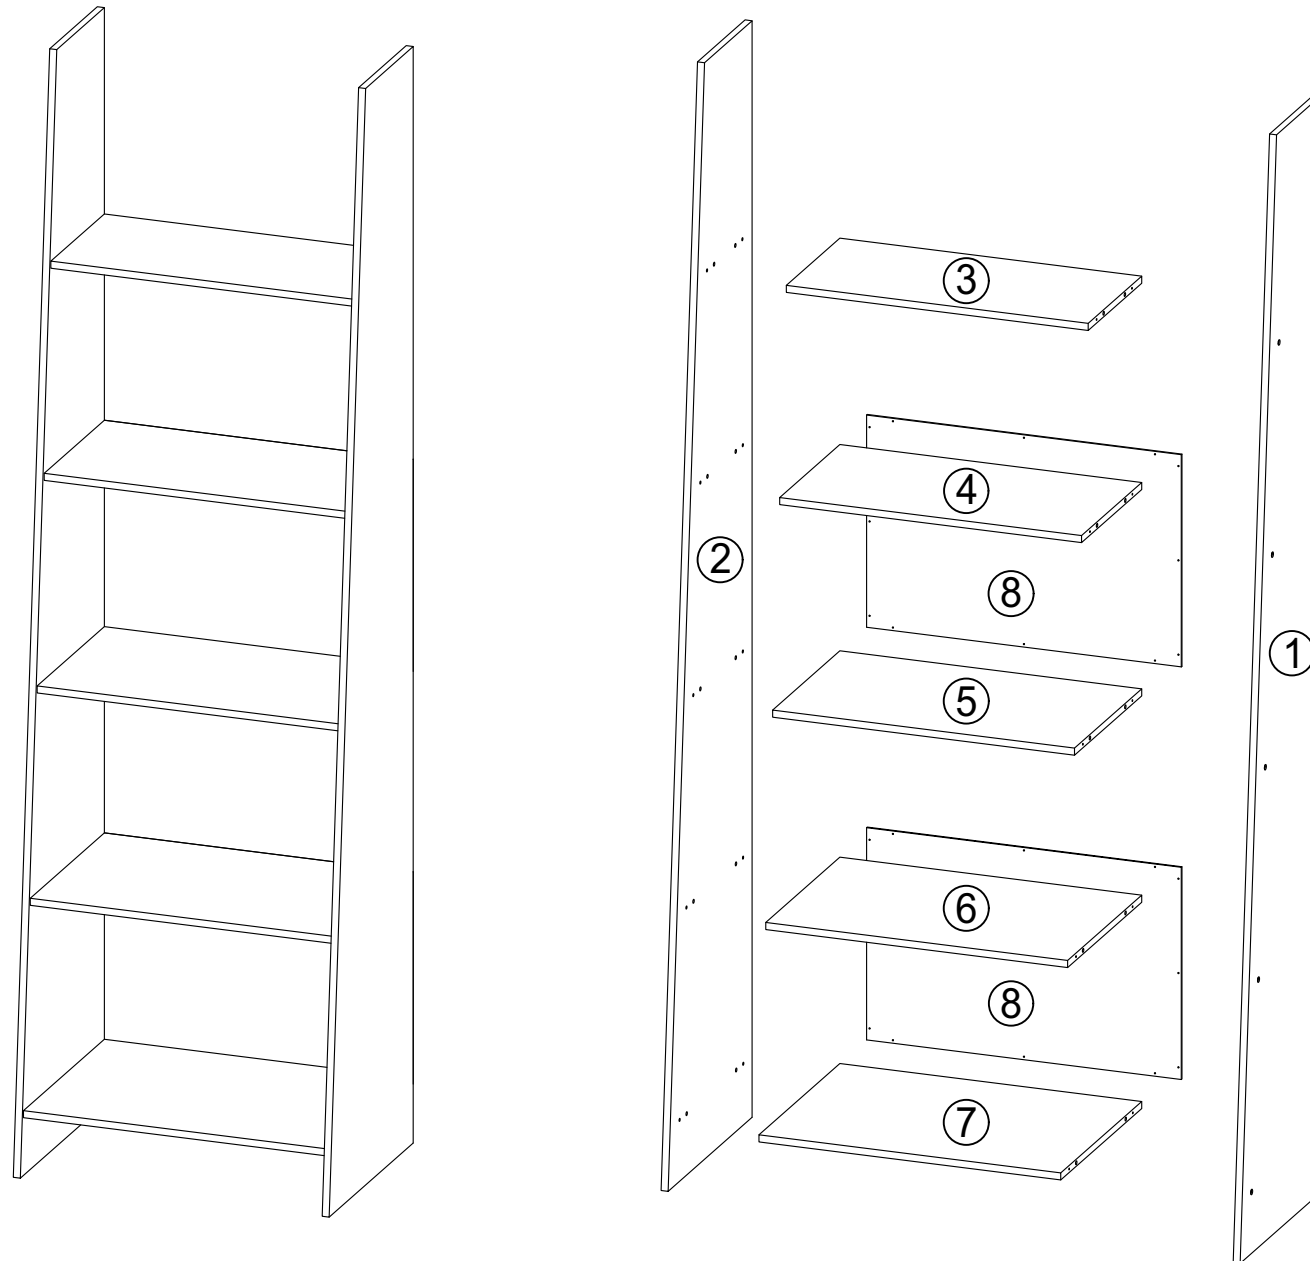 
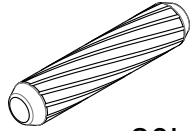 
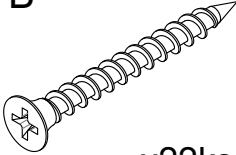 
 
 
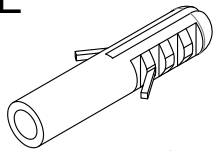 
 
 


DEKATO


TPK5418638

Montážny návod




| | |
|---|--|
| A  x20ks | B  x22ks |
| C  x2ks | D  x2ks |
| E  x2ks | F  x24ks |
| G  x20ks | H  x4ks |

 
Krok 1

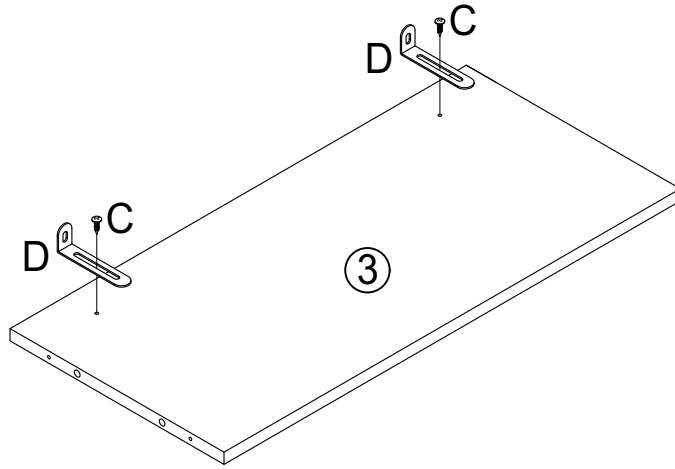

Krok 2

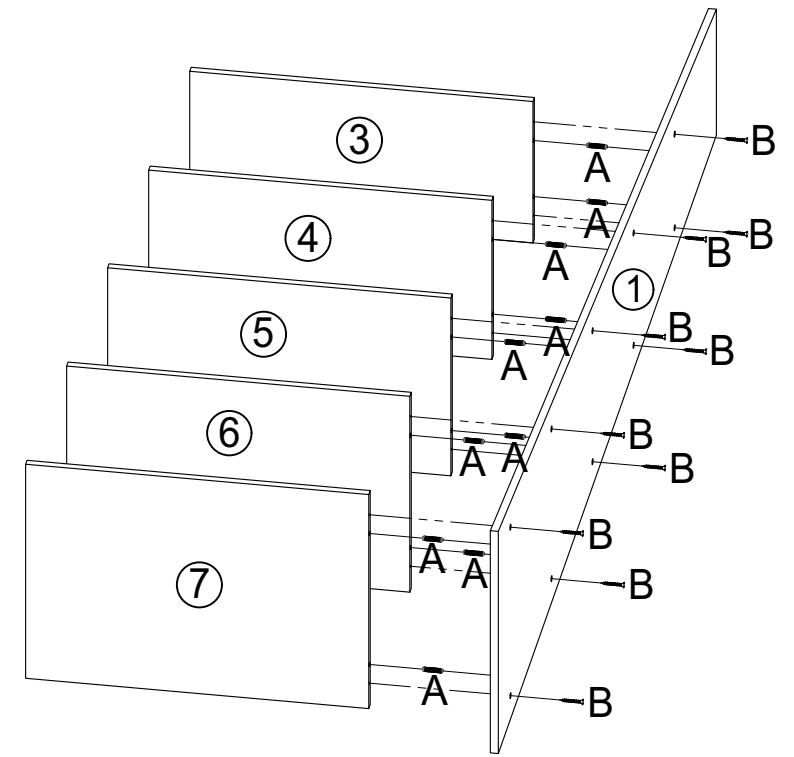 

Krok 3

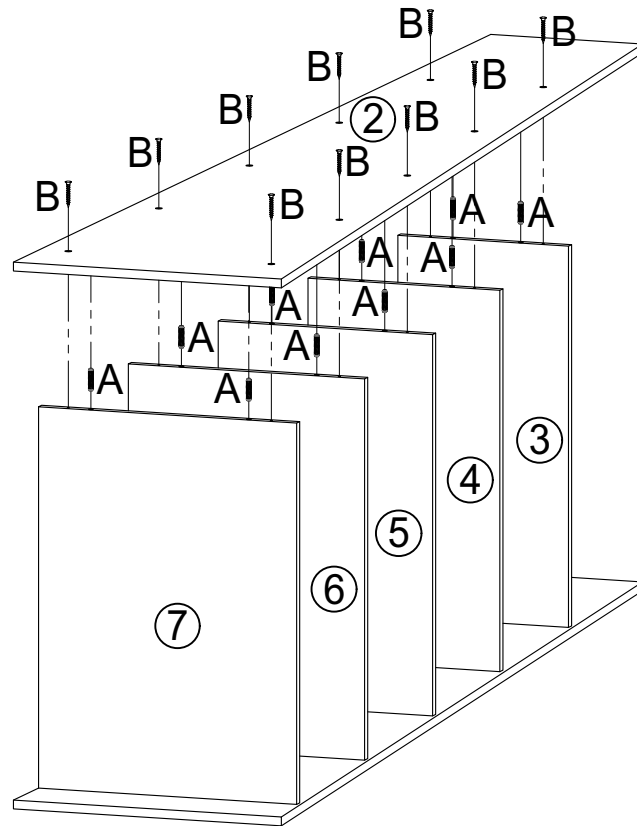 

Krok 4

